


## ASSEMBLY INSTRUCTIONS

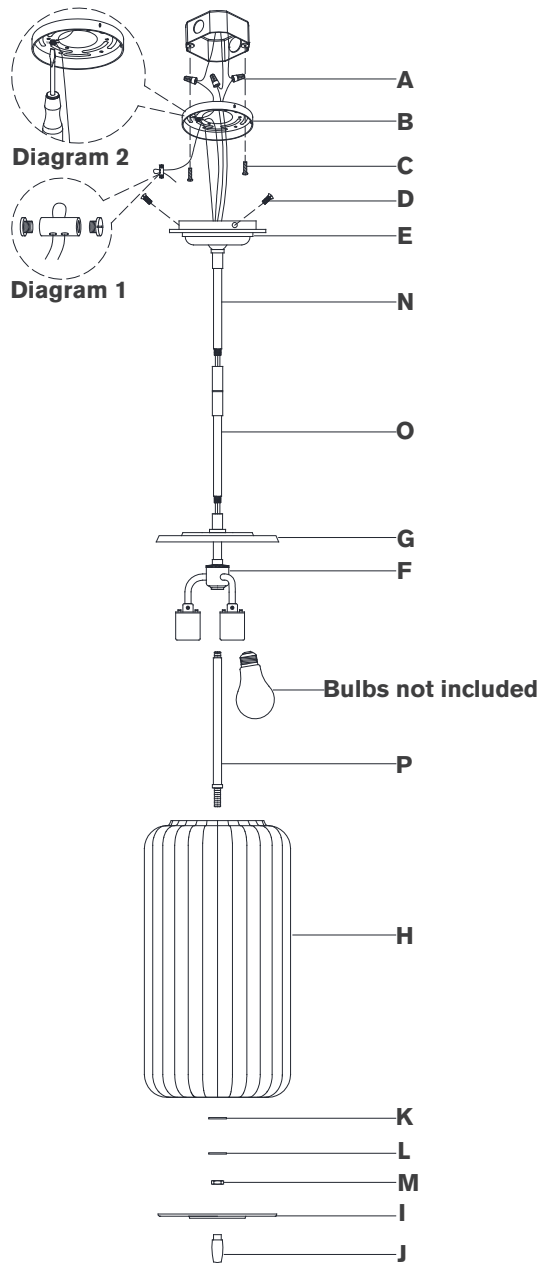

## Eden Medium Pendant

Item # TOB 5160

### NOTICE:

This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

### TOOLS REQUIRED (NOT INCLUDED):

Phillips Screwdriver      Slotted Screwdriver      Wire Cutters  
Wire Strippers


1. Carefully remove all parts from the box. Place on a clean, soft surface.
2. Remove mounting plate **(B)** from canopy **(E)** by removing screws **(D)**.
3. Install mounting plate **(B)** to junction box and secure with mounting screws **(C)**.
4. Feed electrical, ground wires and support cable through bottom rod **(O)** and connect to fixture **(G)**.
5. Continue feeding wires through top rod **(N)** and connect to bottom rod **(O)**.
6. Cut excess wires, being sure to leave enough to reach the junction box.
7. Separate two sides of molded wire, and strip insulation on each 5/8".
8. Run support cable through hole on back of mounting plate **(B)**. Loosen cable lock and install to end of support cable. Insert other end of cable through the cable lock and tighten ends with a screwdriver to secure. (see diagram 1)
9. Wrap fixture ground wire (bare copper) around the green grounding screw (see diagram 2). Tighten. Continue fixture ground wire and connect to supply ground wire (usually green or bare copper) using wire nut **(A)**.

**NOTE:** It is imperative that the fixture is grounded.

VISUAL COMFORT



## ASSEMBLY INSTRUCTIONS

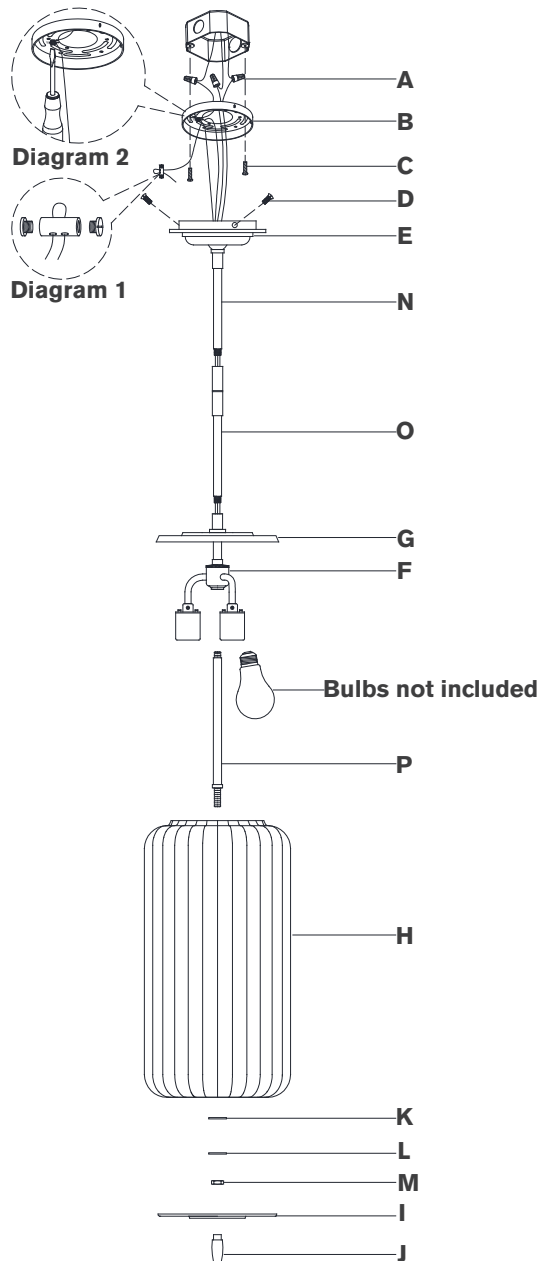

## Eden Medium Pendant

Item # TOB 5160

### NOTICE:

This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

10. Connect fixture neutral wire (ribbed) to the supply neutral wire (usually white) using wire nut **(A)**.
11. Connect fixture hot wire (smooth with markings) to the supply hot wire (usually black) using wire nut **(A)**.  
**CAUTION:** Do not reverse the hot and neutral connections.
12. Make sure all wire connections are tight, then carefully tuck into the junction box.
13. Install canopy **(E)** to mounting plate **(B)** and secure with screws **(D)**.
14. Install light bulbs into the sockets.
15. Thread rod **(P)** to the bottom of center hub **(F)**.
16. Install glass shade **(H)** to rod **(P)** and secure with rubber washer **(K)**, metal washer **(L)** and lock nut **(M)**.  
**NOTE:** Do not overtighten otherwise shade could become damaged.
17. Install metal cap **(I)** to rod **(P)** and secure with finial **(J)**.

**Care Instructions:** Clean only with a soft dry cloth or feather duster. Do Not use abrasive or chemical agents.